CLASSIC SERIES | Tuff™

RECOMMENDED STEP DRILL PROTOCOL

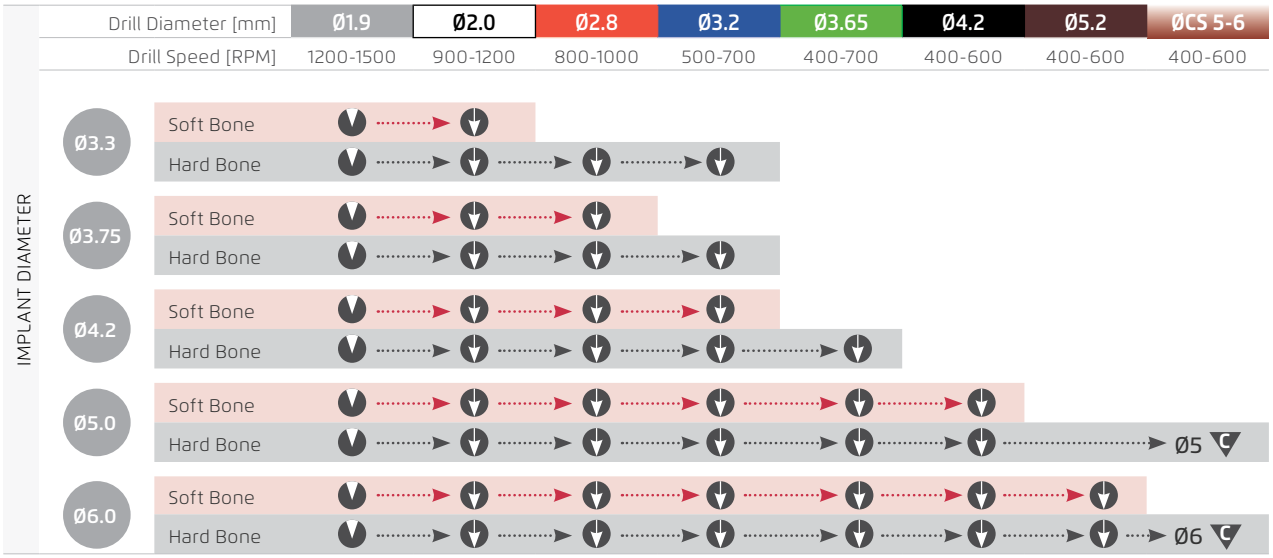

Drill to mark osteotomy site

Drill osteotomy to implant

Drill with countersink to prepare the crest

The recommended drill protocol procedure should not replace the dentist's/surgeon's judgment.
The implants may be loaded for immediate function when good primary stability (above 35 Ncm) has been achieved and with appropriate occlusal loading.

For implants longer than 16 mm, please refer to the Long Drills page.